
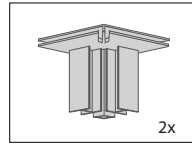
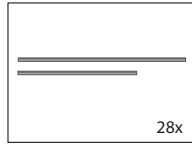






1

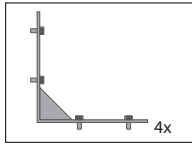


# L-FORMATION CONCEALED CORNER

## INSTALLING THE CORNERS


4x

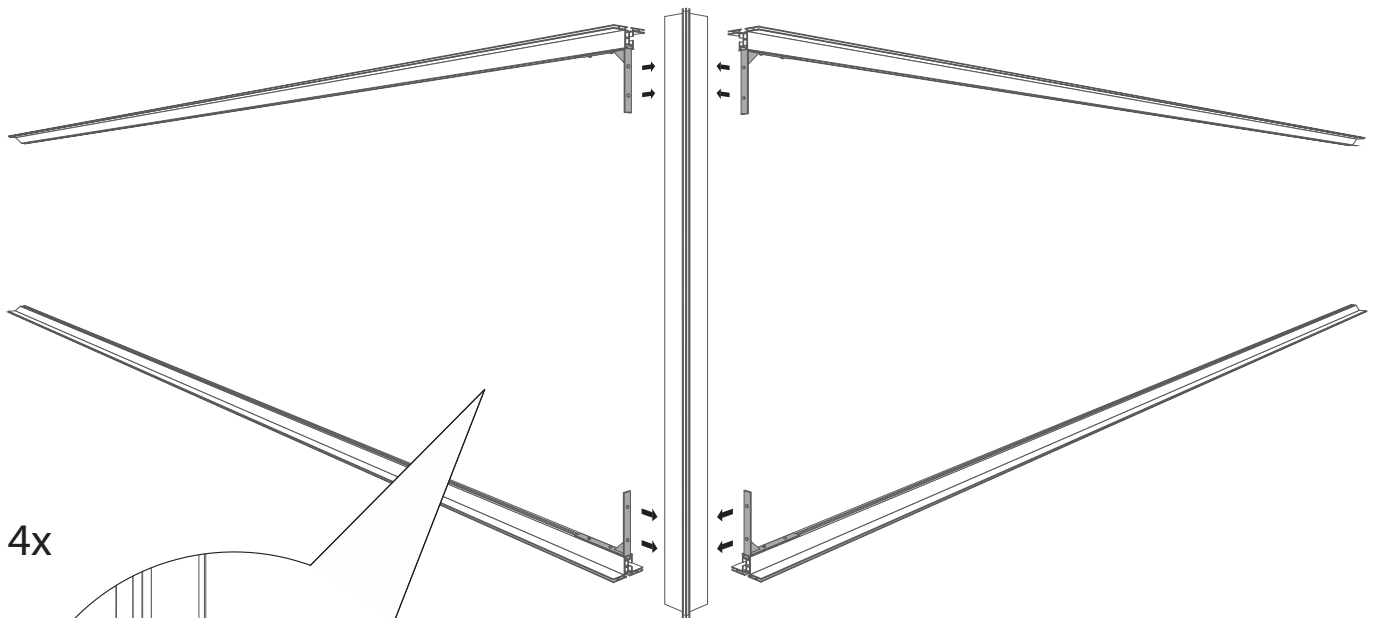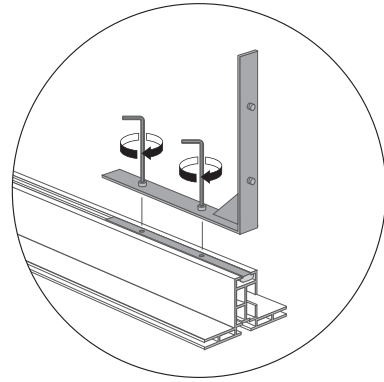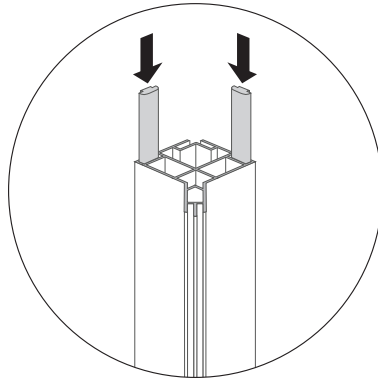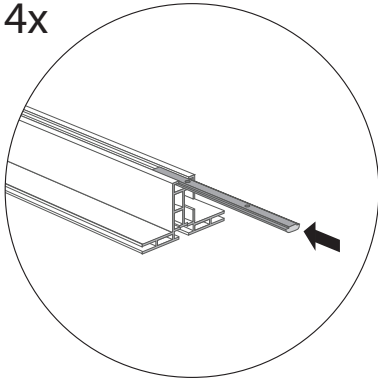

4x



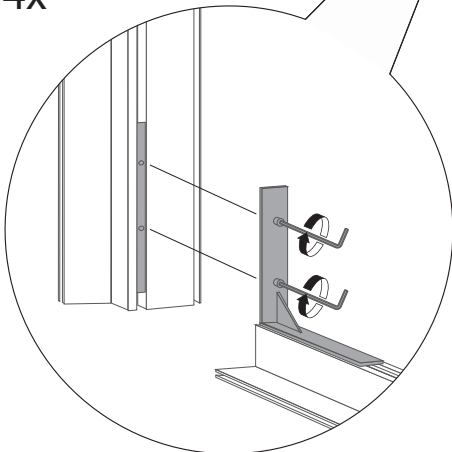


2

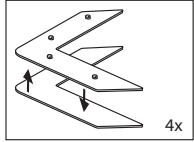


BH0200





4x

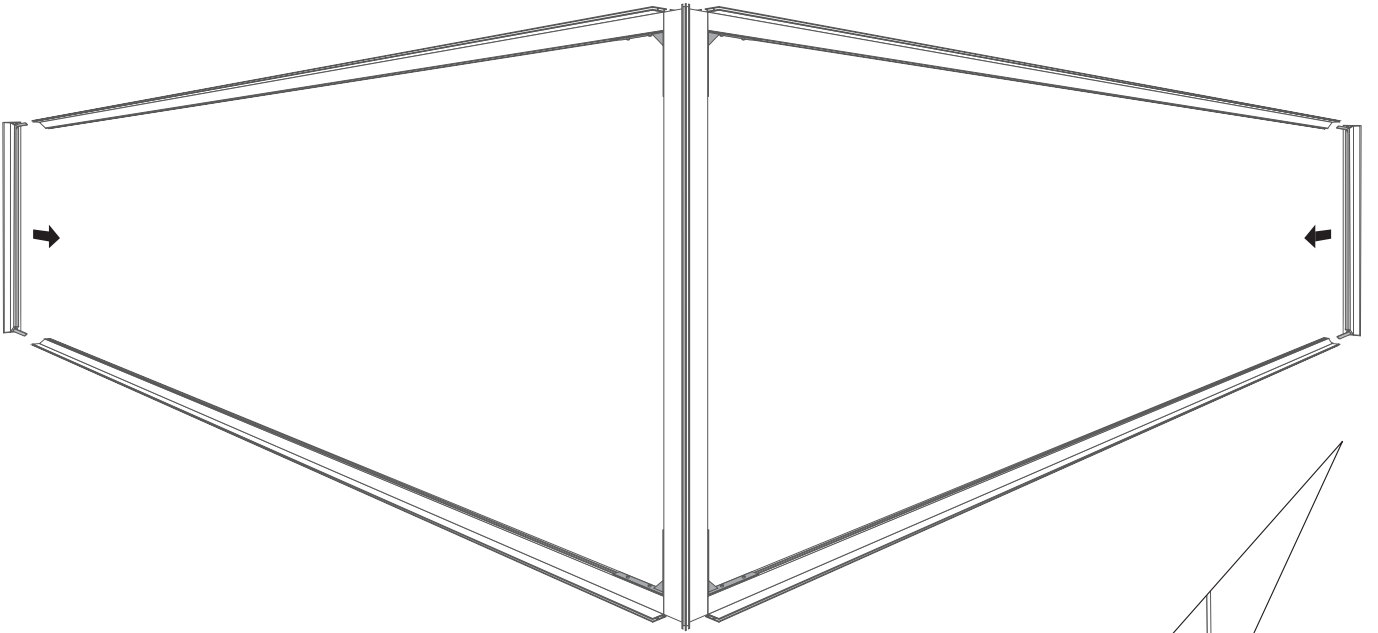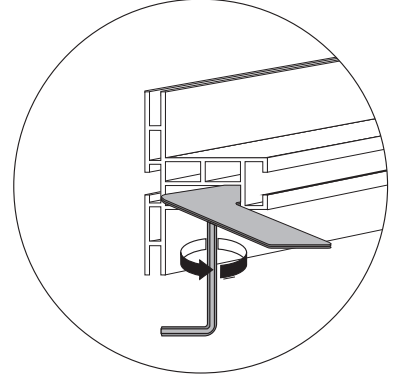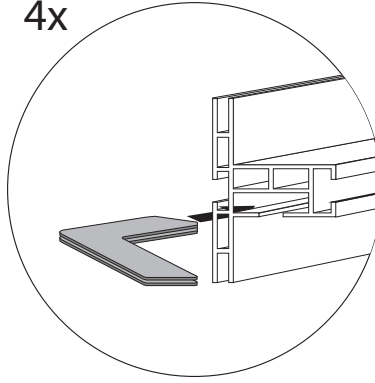


2x

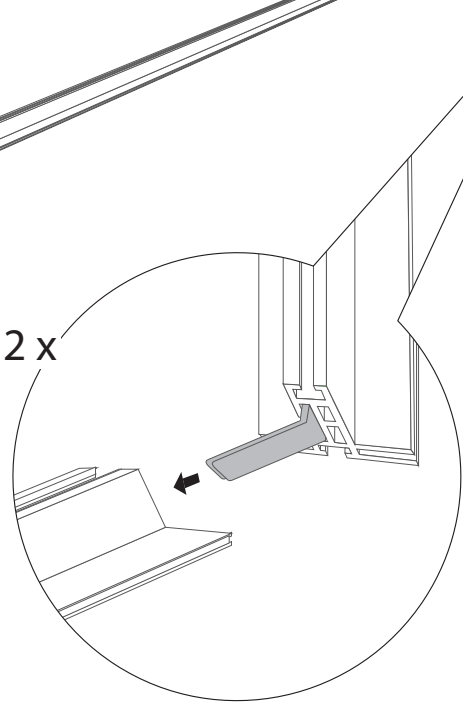



3

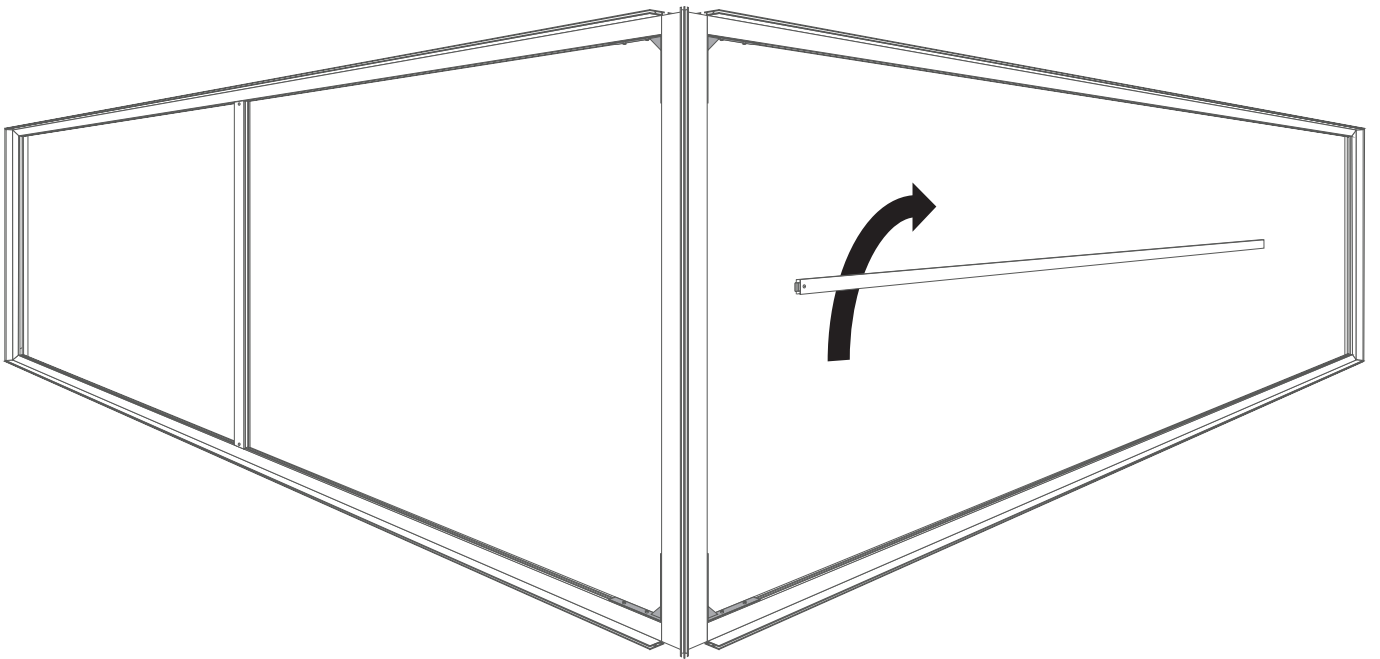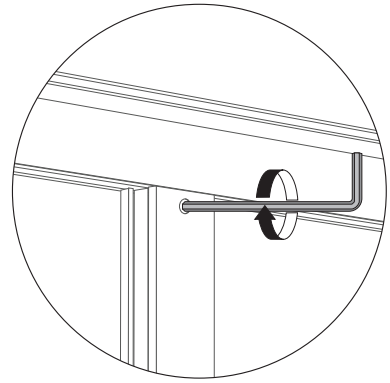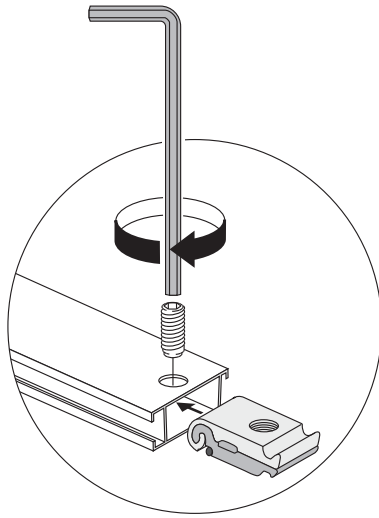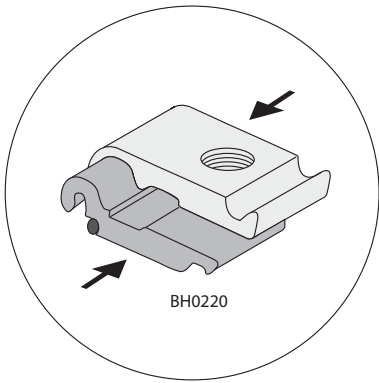


4

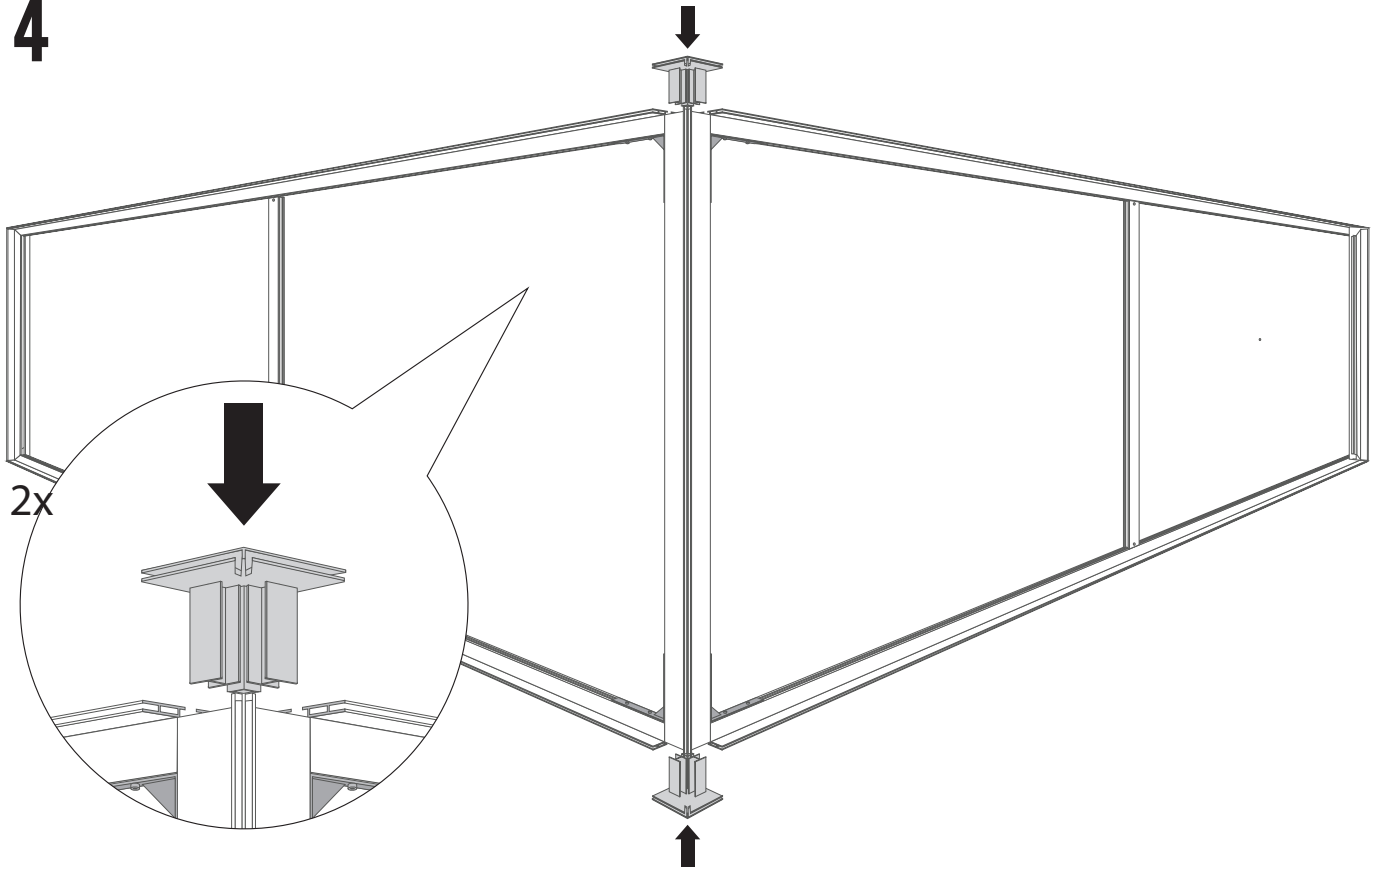

5

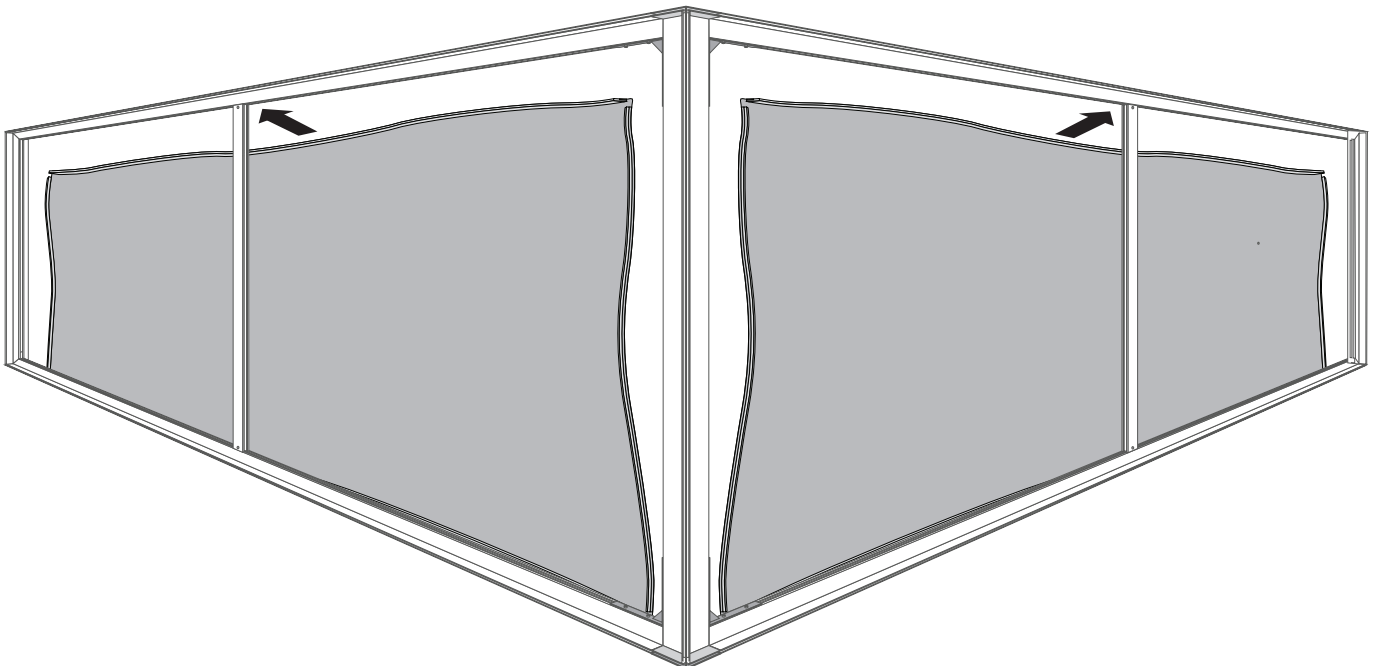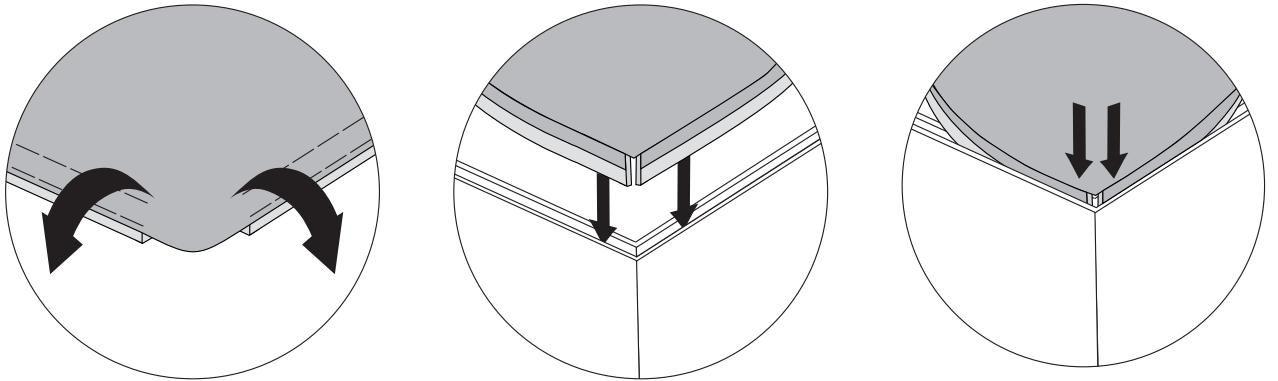

6

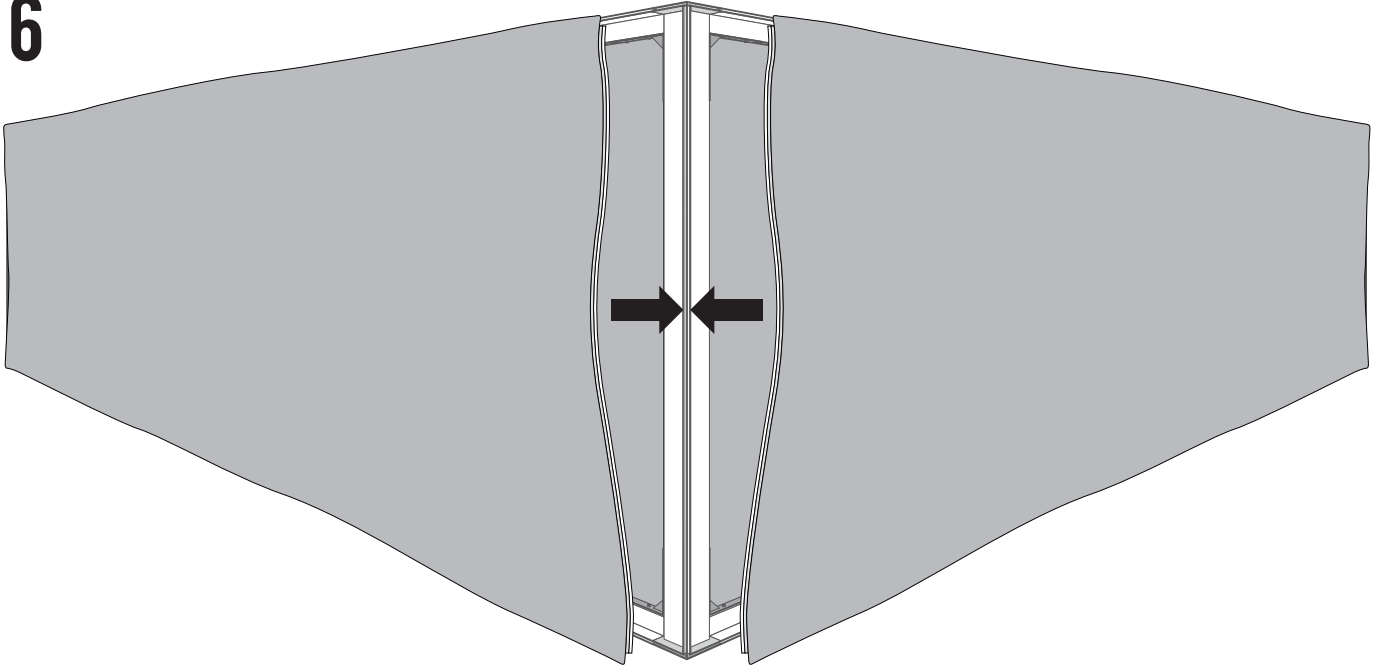

7

